



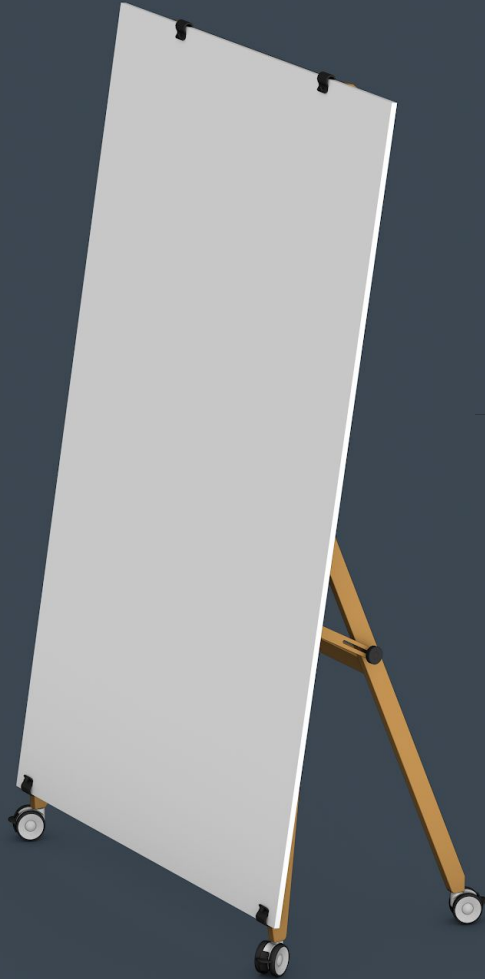



Easel - User Manual

September 2019

Easel Portrait

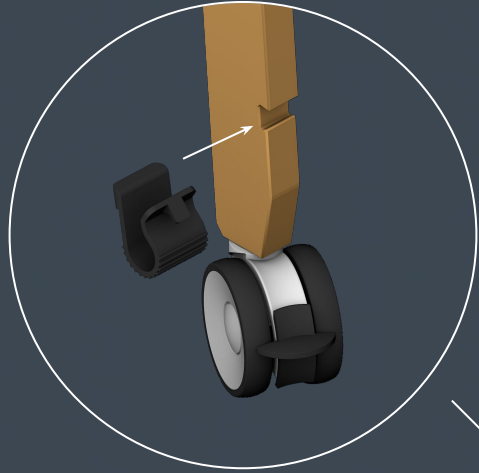

Easel Landscape

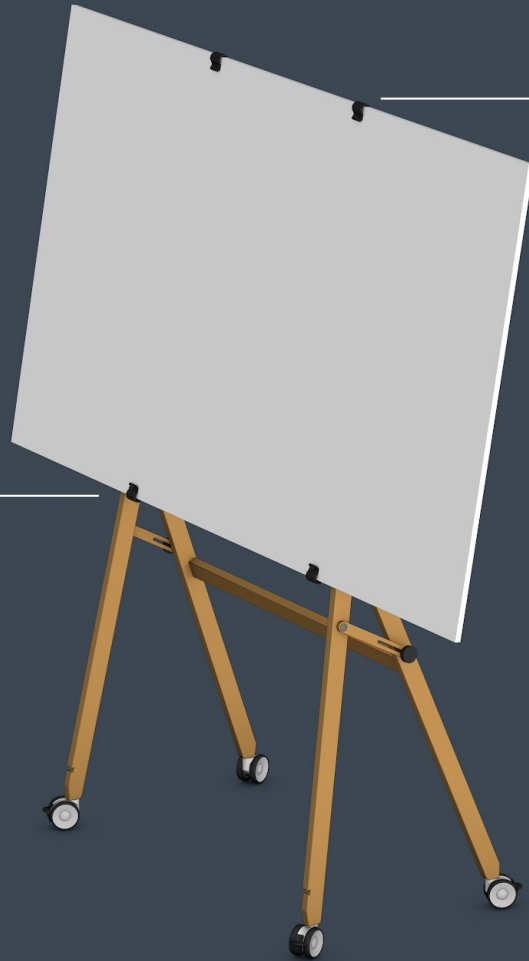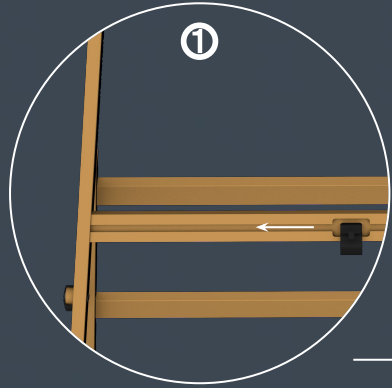

Flip Charts & Posters

To attach paper or posters we recommend “Scotch Removable Tape”. It holds reliably and does not damage the surface of the Studioboard nor the paper.

